

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



W352 Project Table W342 Play Table



Recommended Use

The Outlast Tables support many outdoor activities including eating, art projects, manipulative play, and dramatic play. The smooth wooden top provides a stable, gap-free work surface. The wide stance of the legs ensures stability and maximizes leg room. The table is stable and durable, allowing it to be used almost anywhere outdoors, e.g. patio, sandbox, messy area.

⚠ WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

▲ Adults are responsible to prevent Outlast Tables from being employed by children in unsafe combinations with other components.

Accessories

Four lengths of legs are available.

Assembly

This product comes in two cartons, one containing the table top, and the other containing:

- Four legs
- Four barrel bolts
- Four machine screws
- Two Allen wrenches

Legs attach to plastic brackets.

1. Turn table upside down.
2. Slide legs all the way into brackets.
3. Insert bolts through aligned holes.
4. Tighten screws with Allen wrenches provided. Do not over tighten.

If your shipment is incomplete, please call Customer Service.

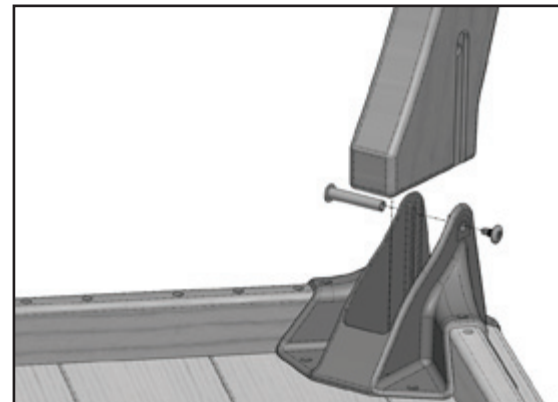


Figure A

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

Maintenance

Acetylated wood weathers a natural silver grey if left untreated outdoors.

If you prefer the original look, clean with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

If you wish to maintain the original finished look of the tabletop while using paint, protect the work surface with appropriate cover. Scrubbing to remove paint stains may also remove some factory stain. However, this will not affect weatherproofing.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a bleach solution.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. All edges and corners are rounded for safety and ease of cleaning.

End grain is protected by plastic guards. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Packaging Recycling

Please help preserve the earth for the children and recycle at an appropriate facility.

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

